



W-W Manufacturing

RT. 1 BOX 138

THOMAS, OK. 73669

Phone: (580) 661-3720 Fax: (580) 661-3722



Setup Instructions for Express Portable Corral System

 
 
 
 
IMPORTANT: Read all directions before setting up system to avoid damage to system voiding warranty or bodily injury to yourself or bystanders!

1. Before attempting setup of system, have all bystanders stand away from system.
2. With system hooked to truck, first unhook fastening from ball of truck. .
3. Push up the hydraulic lever to activate the front hydraulic foot. This is the hydraulic lever located on the front of the main frame.
4. Lower front hydraulic foot of system to raise from the ball of your truck. With system raised safely from truck, pull truck away from the system.
5. Lower front of system back to the ground. To help stabilize system, extend the front stabilizer (Located on lower front of the main frame) and secure with pin that holds stabilizer arm in place. **Failure to do this step could result in system overturning and causing damage or injury.**
6. Pull hydraulic lever to activate the rear hydraulic foot of system.
7. Unhook safety chain and lower the rear hydraulic foot to raise the rear of the system to clear the transport wheel from the ground. (Keep foot perpendicular to main frame.) .
8. Remove the transport wheels from the system and safely put in an area out of the way.
9. Lower the rear of the system back to the ground, where the entire main frame of the system is now sitting on the ground.
10. Disconnect all chains holding panels in place and fold panels out in the way described on the attached sheets.
11. Unpin and remove the panel transport arms, to avoid any injury to cattle.
12. You are now ready to start using your system!

Getting system ready for **transport after use:**


1. Replace panel transport arms and pin securely in place.
2. Fold all panels back into the system on the transport arms and secure with chains to assure panels will not move and rub together during transport.
3. After panels are secure, raise rear of system and slide transport wheels in place and pin securely.
4. Lower rear of system. Raise rear hydraulic foot completely. (This avoids dragging foot is not raised completely!) Attach safety chain.
5. Pull hydraulic lever to activate the front hydraulic foot of system.
6. Raise front of system with hydraulic foot and carefully back truck under hitch.
7. Lower system onto the truck ball, fasten for transport and attach safety chains.
8. Be sure to completely raise front hydraulic foot to avoid damage.

If you have any questions or need parts, call W-W Livestock Equipment at 800-999-1214.

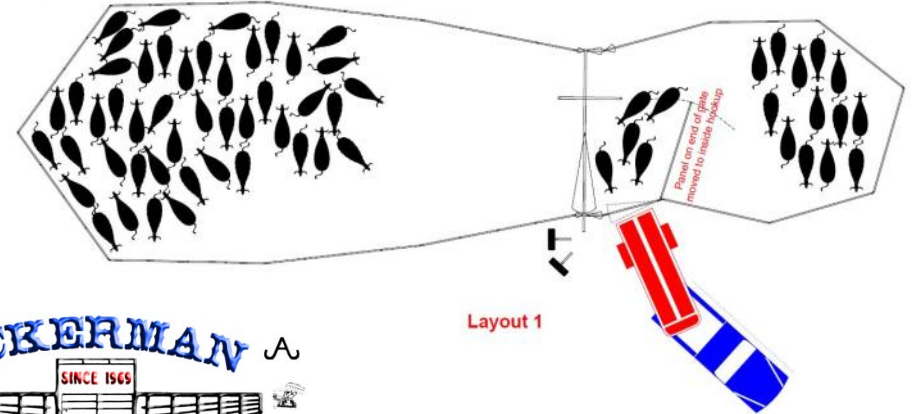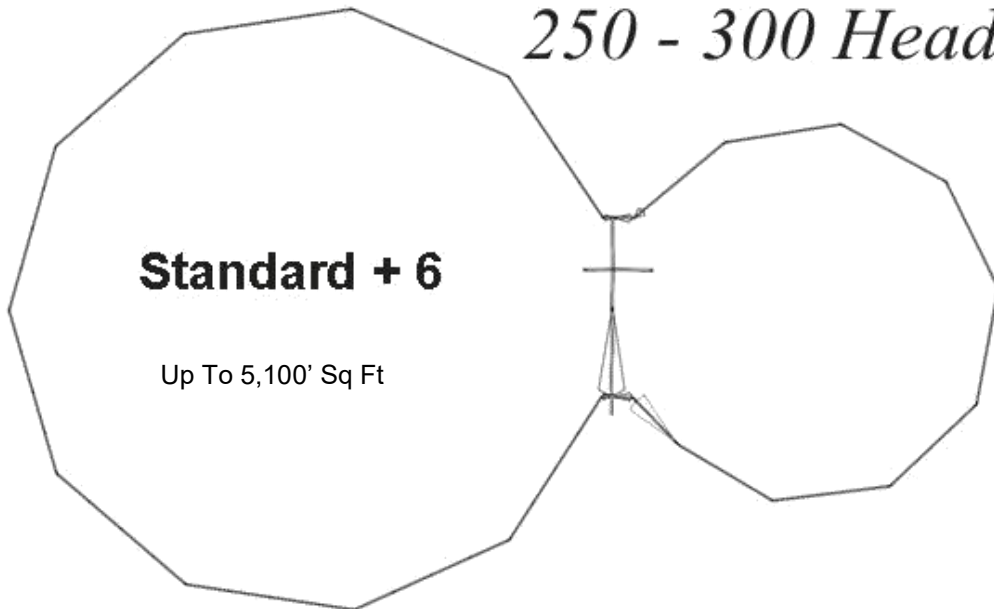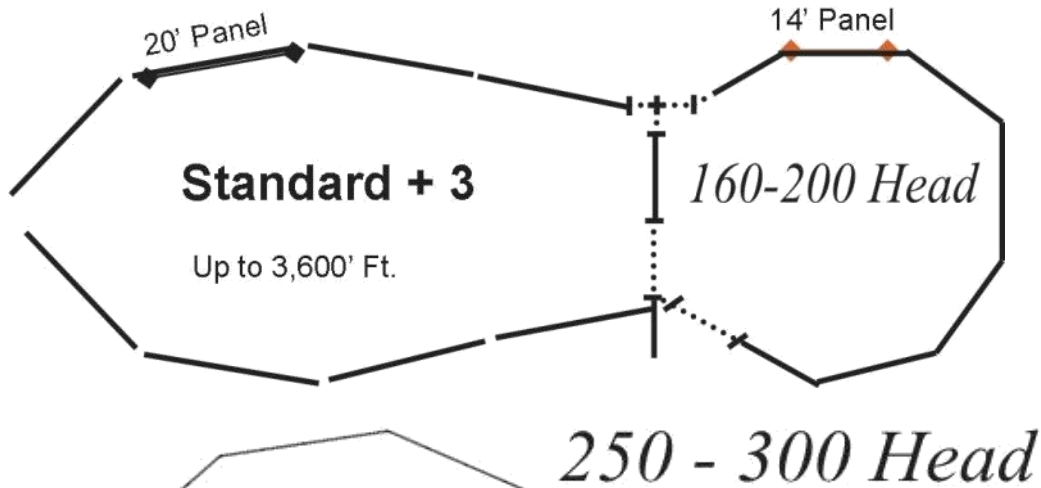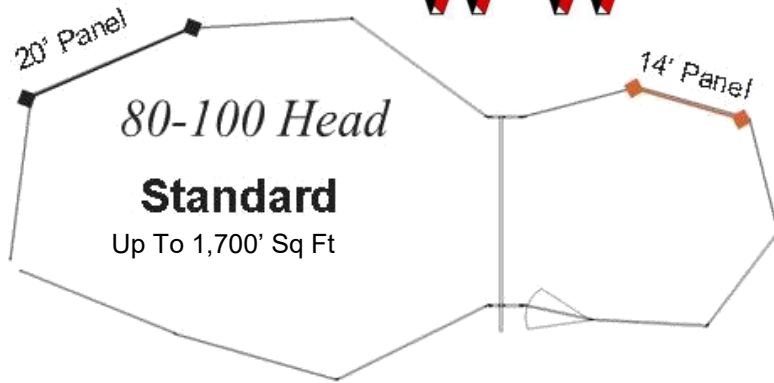




ACKERMAN
SINCE 1969
DISTRIBUTING.COM
800-726-9091

 Shown on +3 Model

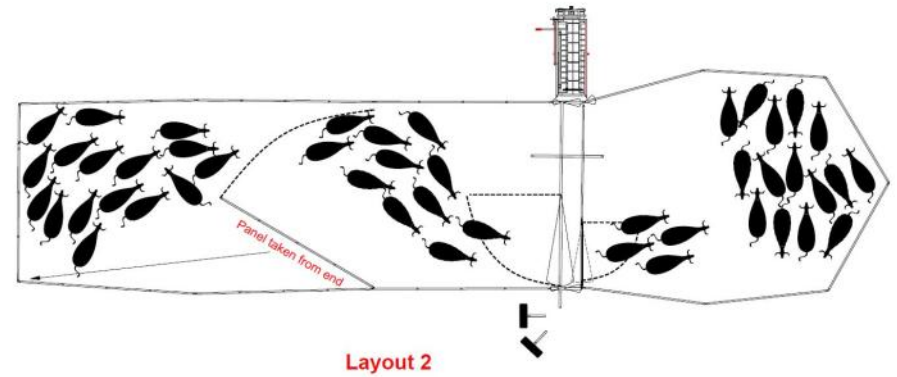

Shown on +3 Model

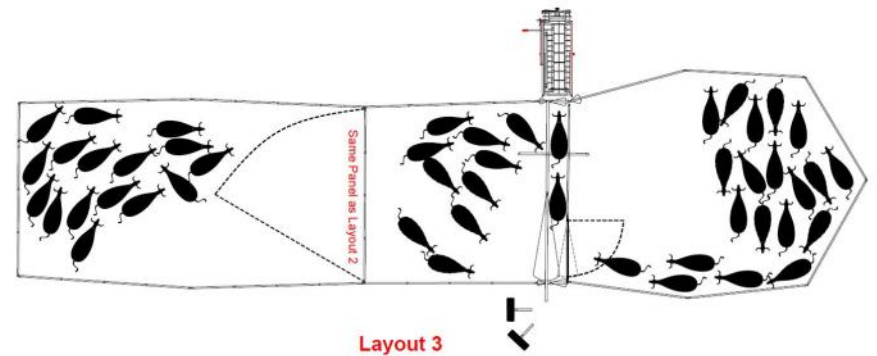 

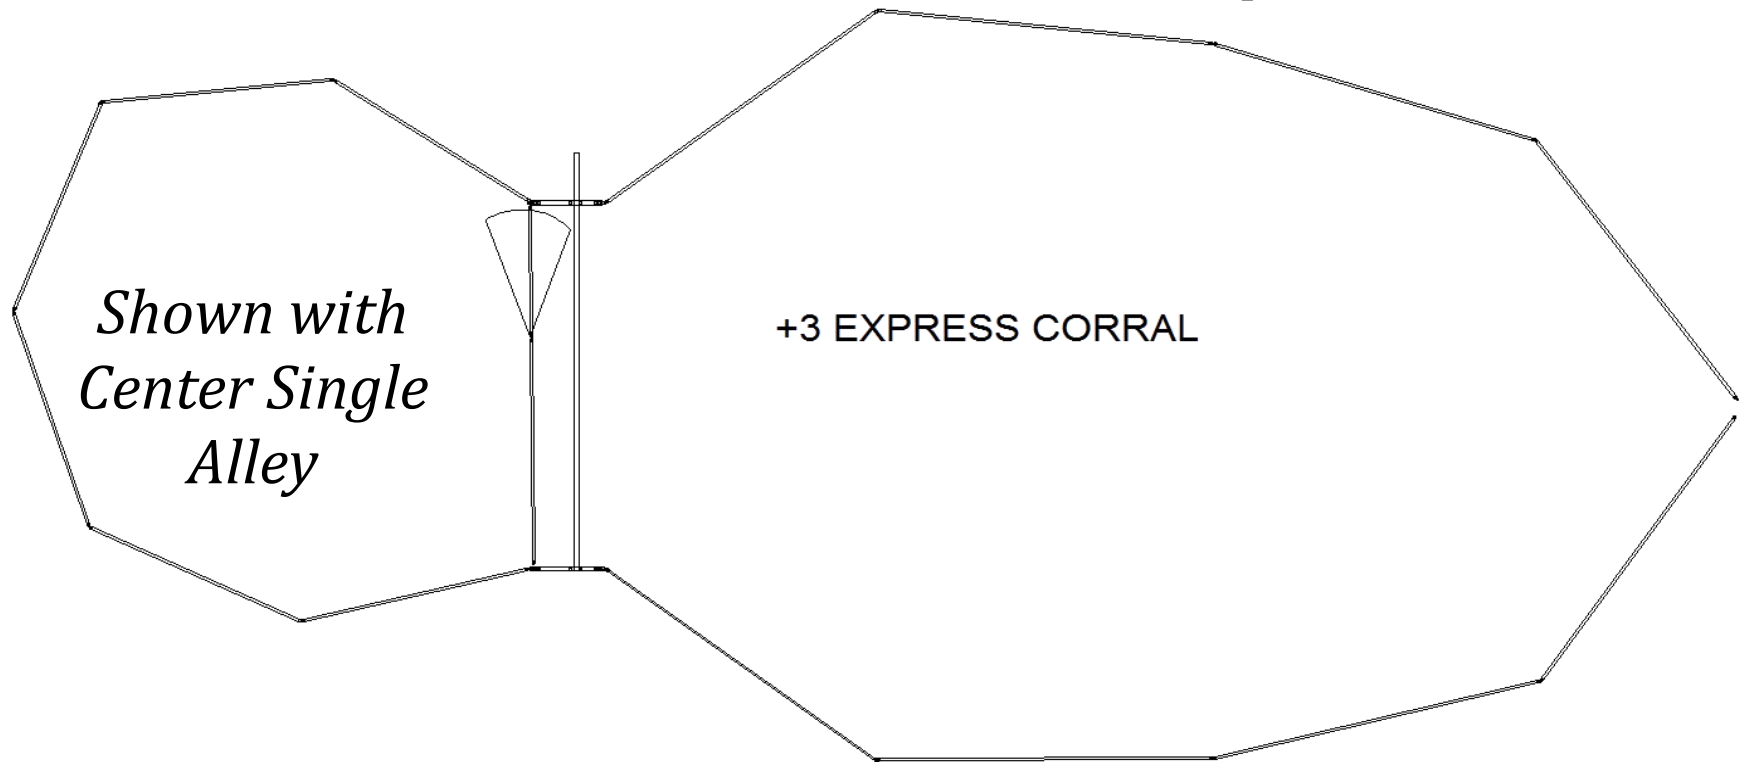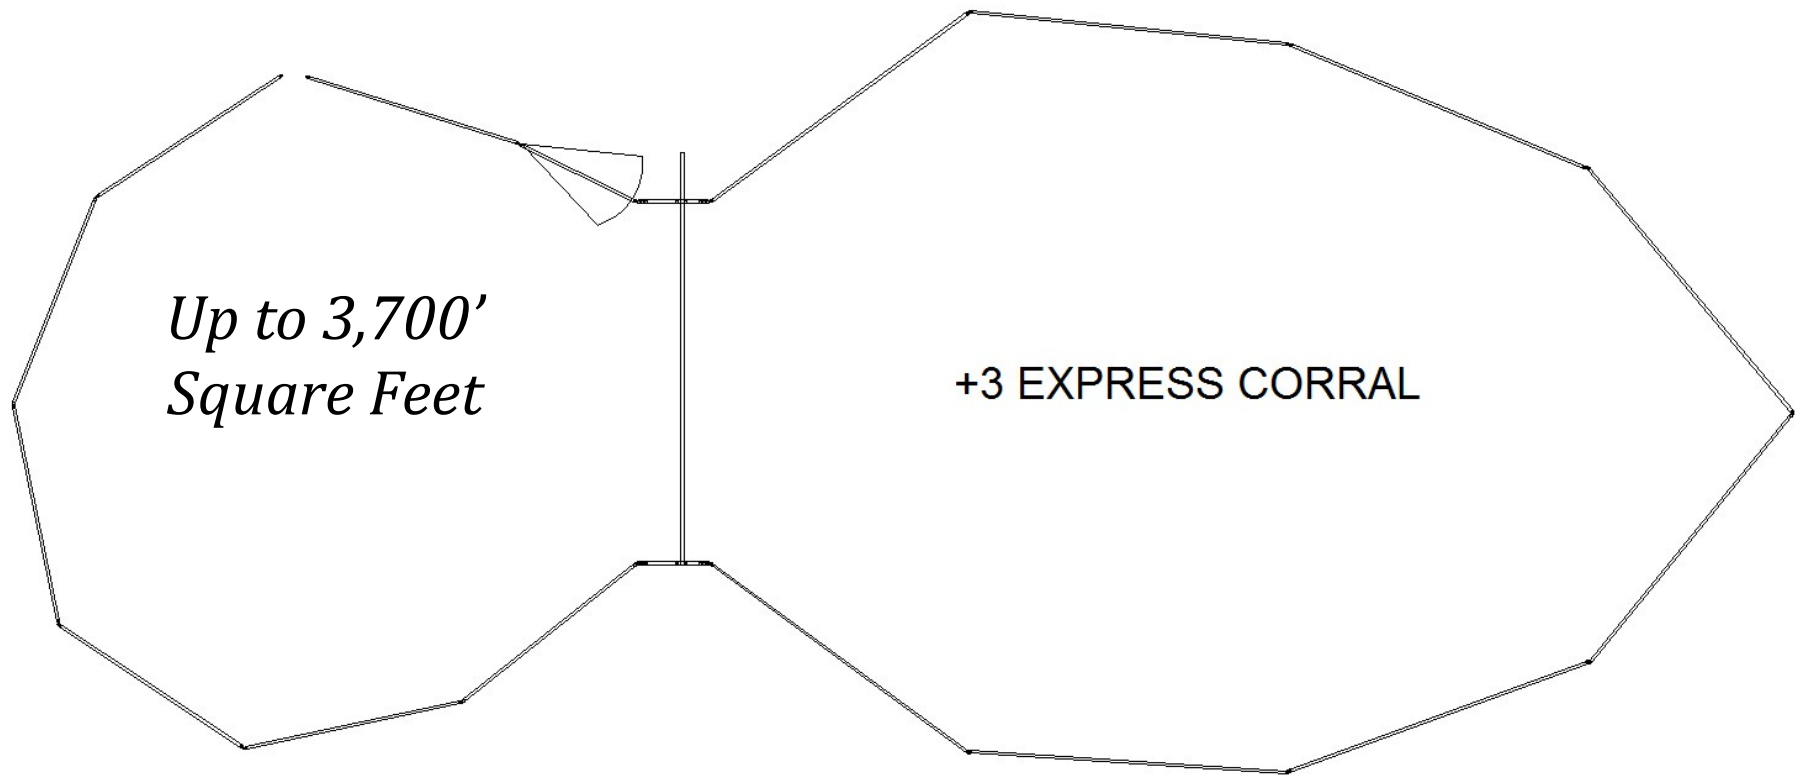  

5 Year Limited Written Warranty

Pre-Galvanized Steel 14 ga. 50,000psi Hi Tensile Steel Tubing

All Gates have Slam Latches

Each Unit Equipped
With a Solar Charging Unit

Full 6' Tall

Tail Lights

Optional: Dual Hitch
w/ Gooseneck &
Bumper Pull Hitch

Standard: Bumper Hitch

Optional: Vinyl 1/2 Sheeting for Center Alley

Solid Wheels
w/ Grease Zirks

Off Road Hitch on Back

TOWS AT HIGHWAY SPEEDS

 
Hwy Hi-Speed Greaseable Axle
6 Lug 16" Hi-Way Tires



800-726-9091

22935 CR 33

LA SALLE, CO 80645

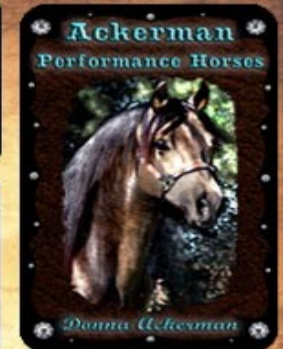


*Lights Come
Standard*



 *Pin On
Headgate
Optional*



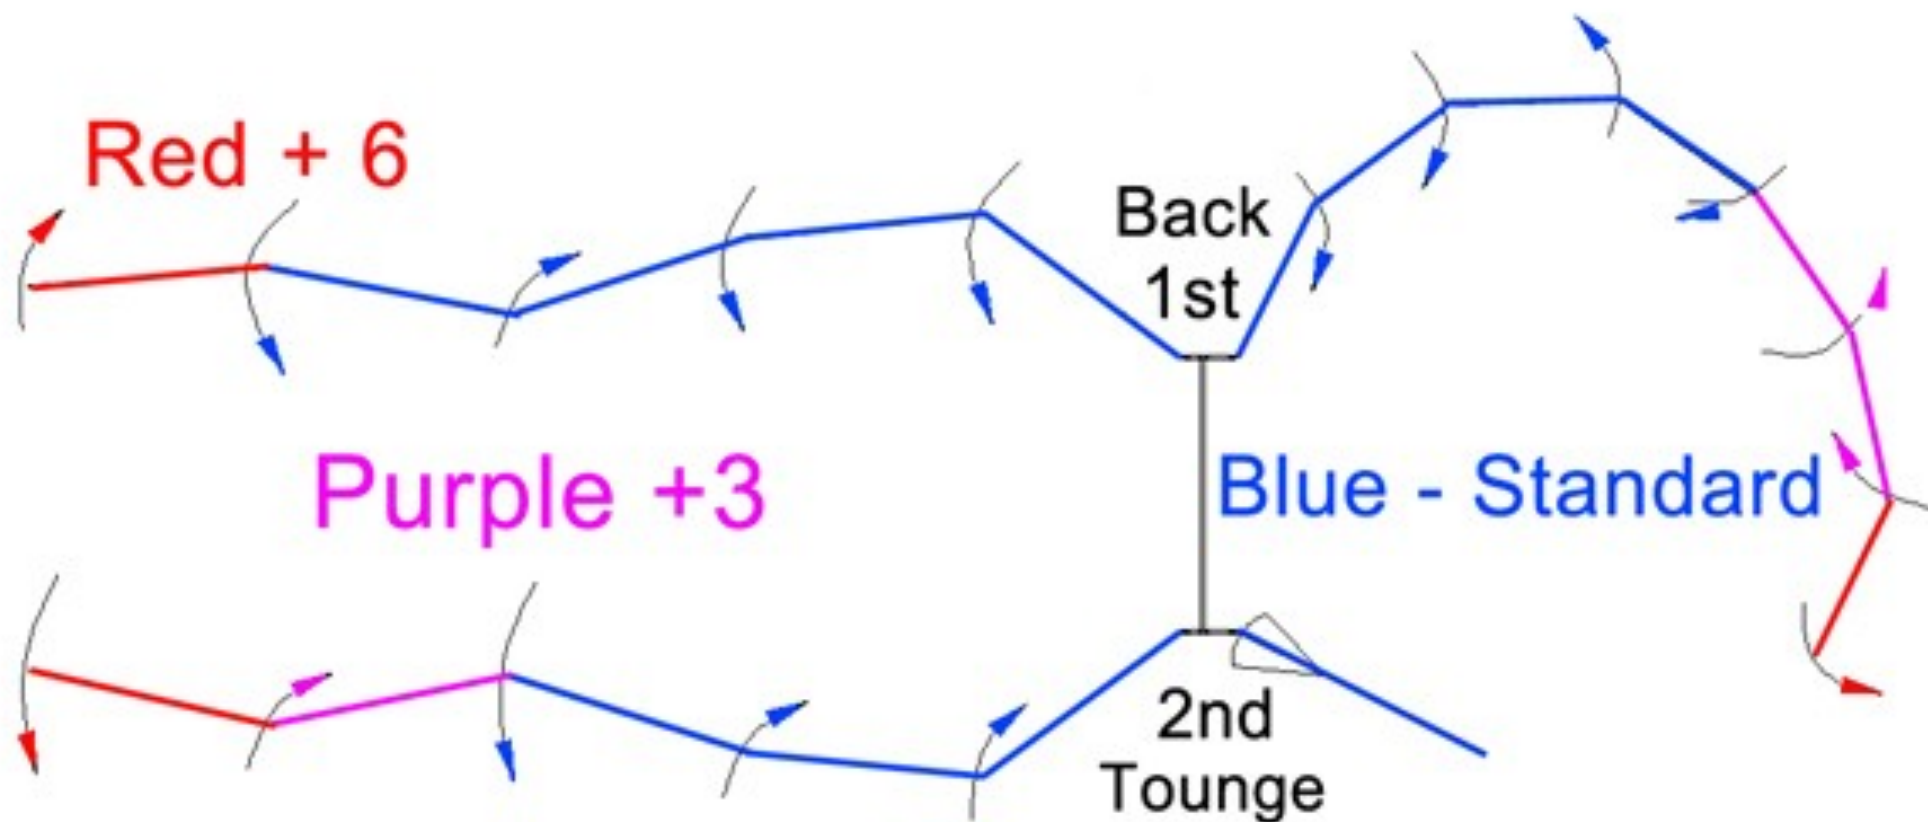

Fold Up Instructions:

- Standard - Blue*
- Standard + 3 - Purple*
- Standard + 6 - Red*